


# OWNER'S MANUAL

## Outdoor Fireplace

Model No. WAD9131T

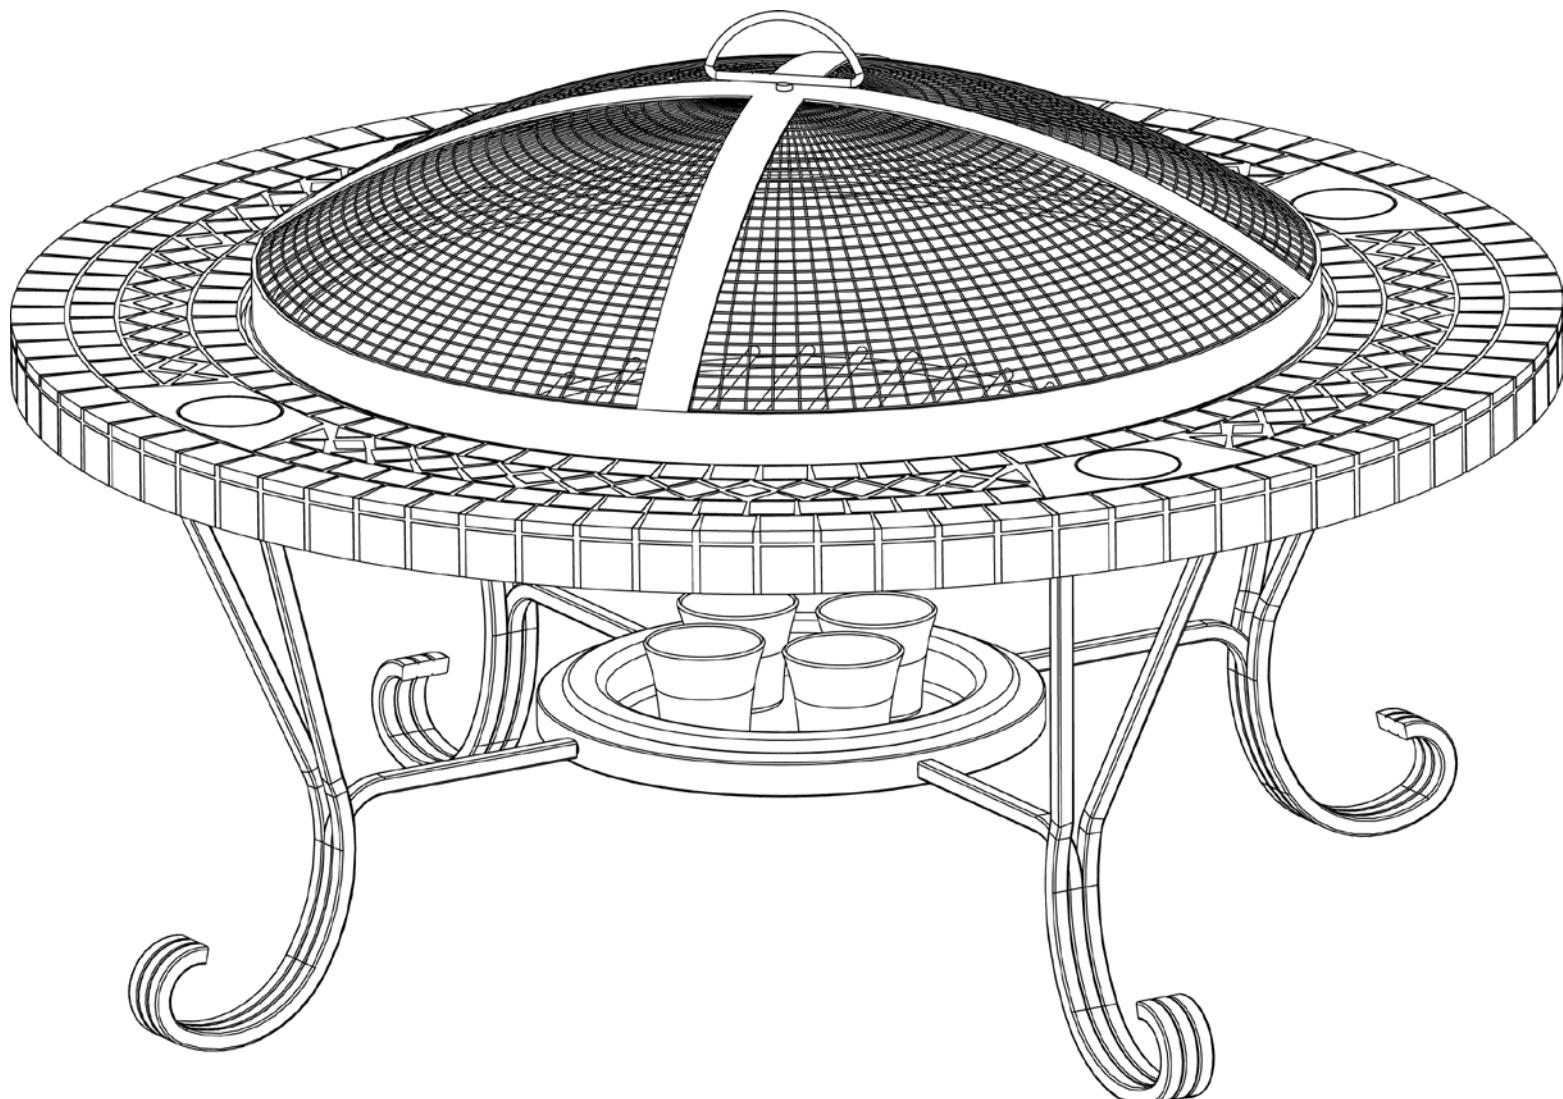

### **WARNING**

#### **FOR YOUR SAFETY:**

**For Outdoor Use Only**  
(outside any enclosure)



### **WARNING**

#### **FOR YOUR SAFETY:**

1. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
2. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.
3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

### **Table of Contents**

Important Safeguards .....	Page 2
Exploded View & Hardware .....	3
Assembly Instructions .....	4
Operating Instructions .....	6
Lighting .....	6
Tending the Fire .....	6
Cooking .....	6
Extinguishing .....	6
Cleaning and Care .....	6
Inspecting .....	6
Cleaning .....	6
Storing .....	6
Product Registration .....	6
Limited Warranty .....	6

Save these instructions for future reference. If you are assembling this unit for someone else, give this manual to him or her to read and save for future reference.

Manufactured in China for:  
Blue Rhino Global Sourcing, Inc.  
Winston-Salem, NC USA  
1.800.762.1142, [www.bluerhino.com](http://www.bluerhino.com)

**▲ DANGER:** Failure to follow the dangers, warning and cautions in this manual may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

**▲ WARNING:**

- ▲ This appliance is for outdoor use only, and shall NOT be used in a building, garage, or any other enclosed area.
- ▲ Do NOT use this outdoor fireplace for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
- ▲ This outdoor fireplace is NOT for commercial use.
- ▲ This outdoor fireplace is NOT to be operated by children.
- ▲ This outdoor fireplace is NOT to be used in or on boats or recreational vehicles.
- ▲ Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
- ▲ When using this outdoor fireplace, exercise the same precautions you would with any open fire.
- ▲ The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this outdoor fireplace.
- ▲ Do NOT use this outdoor fireplace without reading the entire "Owner's Manual".
- ▲ This outdoor fireplace is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke.
- ▲ Do NOT burn charcoal briquets, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
- ▲ Do NOT alter this outdoor fireplace in any manner.
- ▲ Do NOT use this outdoor fireplace until it is COMPLETELY assembled and all parts are securely fastened and tightened.
- ▲ Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
- ▲ Do NOT store or use an LP gas cylinder within 10 feet (3.05 m) of this outdoor fireplace while it is in operation.
- ▲ Do NOT use this outdoor fireplace near automobiles, trucks, vans or recreational vehicles.
- ▲ Do NOT use in an explosive atmosphere. Keep outdoor fireplace area clear and free from combustible materials, gasoline and other flammable liquids.
- ▲ Do NOT use this outdoor fireplace under any overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
- ▲ Always use this outdoor fireplace on a hard, level non-combustible surface such a concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.
- ▲ Always empty this outdoor fireplace before each use.
- ▲ Do NOT wear flammable or loose clothing when operating this outdoor fireplace.
- ▲ Do NOT use in windy conditions.

- ▲ Do NOT use this outdoor fireplace unless spark guards are securely in place.
- ▲ Do NOT use gasoline, kerosene, diesel fuel, lighter fluid or alcohol to light or relight fires.
- ▲ Keep all electrical cords away from a hot fireplace.
- ▲ All surfaces of this outdoor fireplace are hot when in operation. To avoid burns, do NOT touch fireplace until it has completely cooled unless you are wearing protective gear (Potholders, gloves, BBQ mittens, hot pads & etc.). Never touch ashes or coals to see if they are hot.
- ▲ Do NOT leave a lit outdoor fireplace unattended, especially around children and pets.
- ▲ Do NOT attempt to move or store this outdoor fireplace until all ashes and coals are completely extinguished.
- ▲ Do NOT remove ashes or coals until they are completely and fully extinguished.
- ▲ Use heat-resistant gloves or hot pads when contacting handles.
- ▲ Use long, sturdy fireplace tools when adding or moving logs.
- ▲ Do NOT place wood directly into bottom of the outdoor fireplace. Place wood only on the wood grid.
- ▲ Do NOT overload the fireplace. Do not add additional firewood until the fire burns down. NOTICE: If any portion of the bowl, lid or spark guards of this outdoor fireplace are glowing red it is overloaded.
- ▲ Do NOT lean over this outdoor fireplace when lighting or when in use.
- ▲ Do NOT place a hot spark guard or hot fireplace tools onto combustible surfaces such as grass, wooden deck or furniture.
- ▲ Avoid breathing smoke from the fire and avoid getting it into your eyes.
- ▲ This outdoor fireplace should be thoroughly inspected and cleaned on a regular basis.
- ▲ After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and/or cleanup are executed.
- ▲ Use only Blue Rhino Global Sourcing, Inc. factory authorized parts. The use of any part that is NOT factory authorized can be dangerous and will void your warranty.
- ▲ Please use protective gloves when assembling this product.
- ▲ Do not force parts together as this can result in personal injury or damage to the product.
- ▲ Use candle hearth inserts when lighting wood fire. Candles are for ambiance and not to be used in conjunction with wood fire. Remove wax candles from storage under bowl or from hearth mantle before lighting wood fire.
- ▲ Deaths, serious injury or damage to property may occur if the above is not followed exactly.


Contact 1.800.762.1142 for assistance. Do not return to place of purchase.

## Parts List

- 1** Handle
- 2** Spark Guard
- 3** Wood Grate
- 4** Bowl
- 5** Candle Hearth Insert (4)
- 6** Hearth
- 7** Candle Cup (4) \*
- 8** Bottom Bowl
- 9** Leg (4)
- 10** Base Support

\* Remove wax candles before lighting wood fire.

## Exploded View

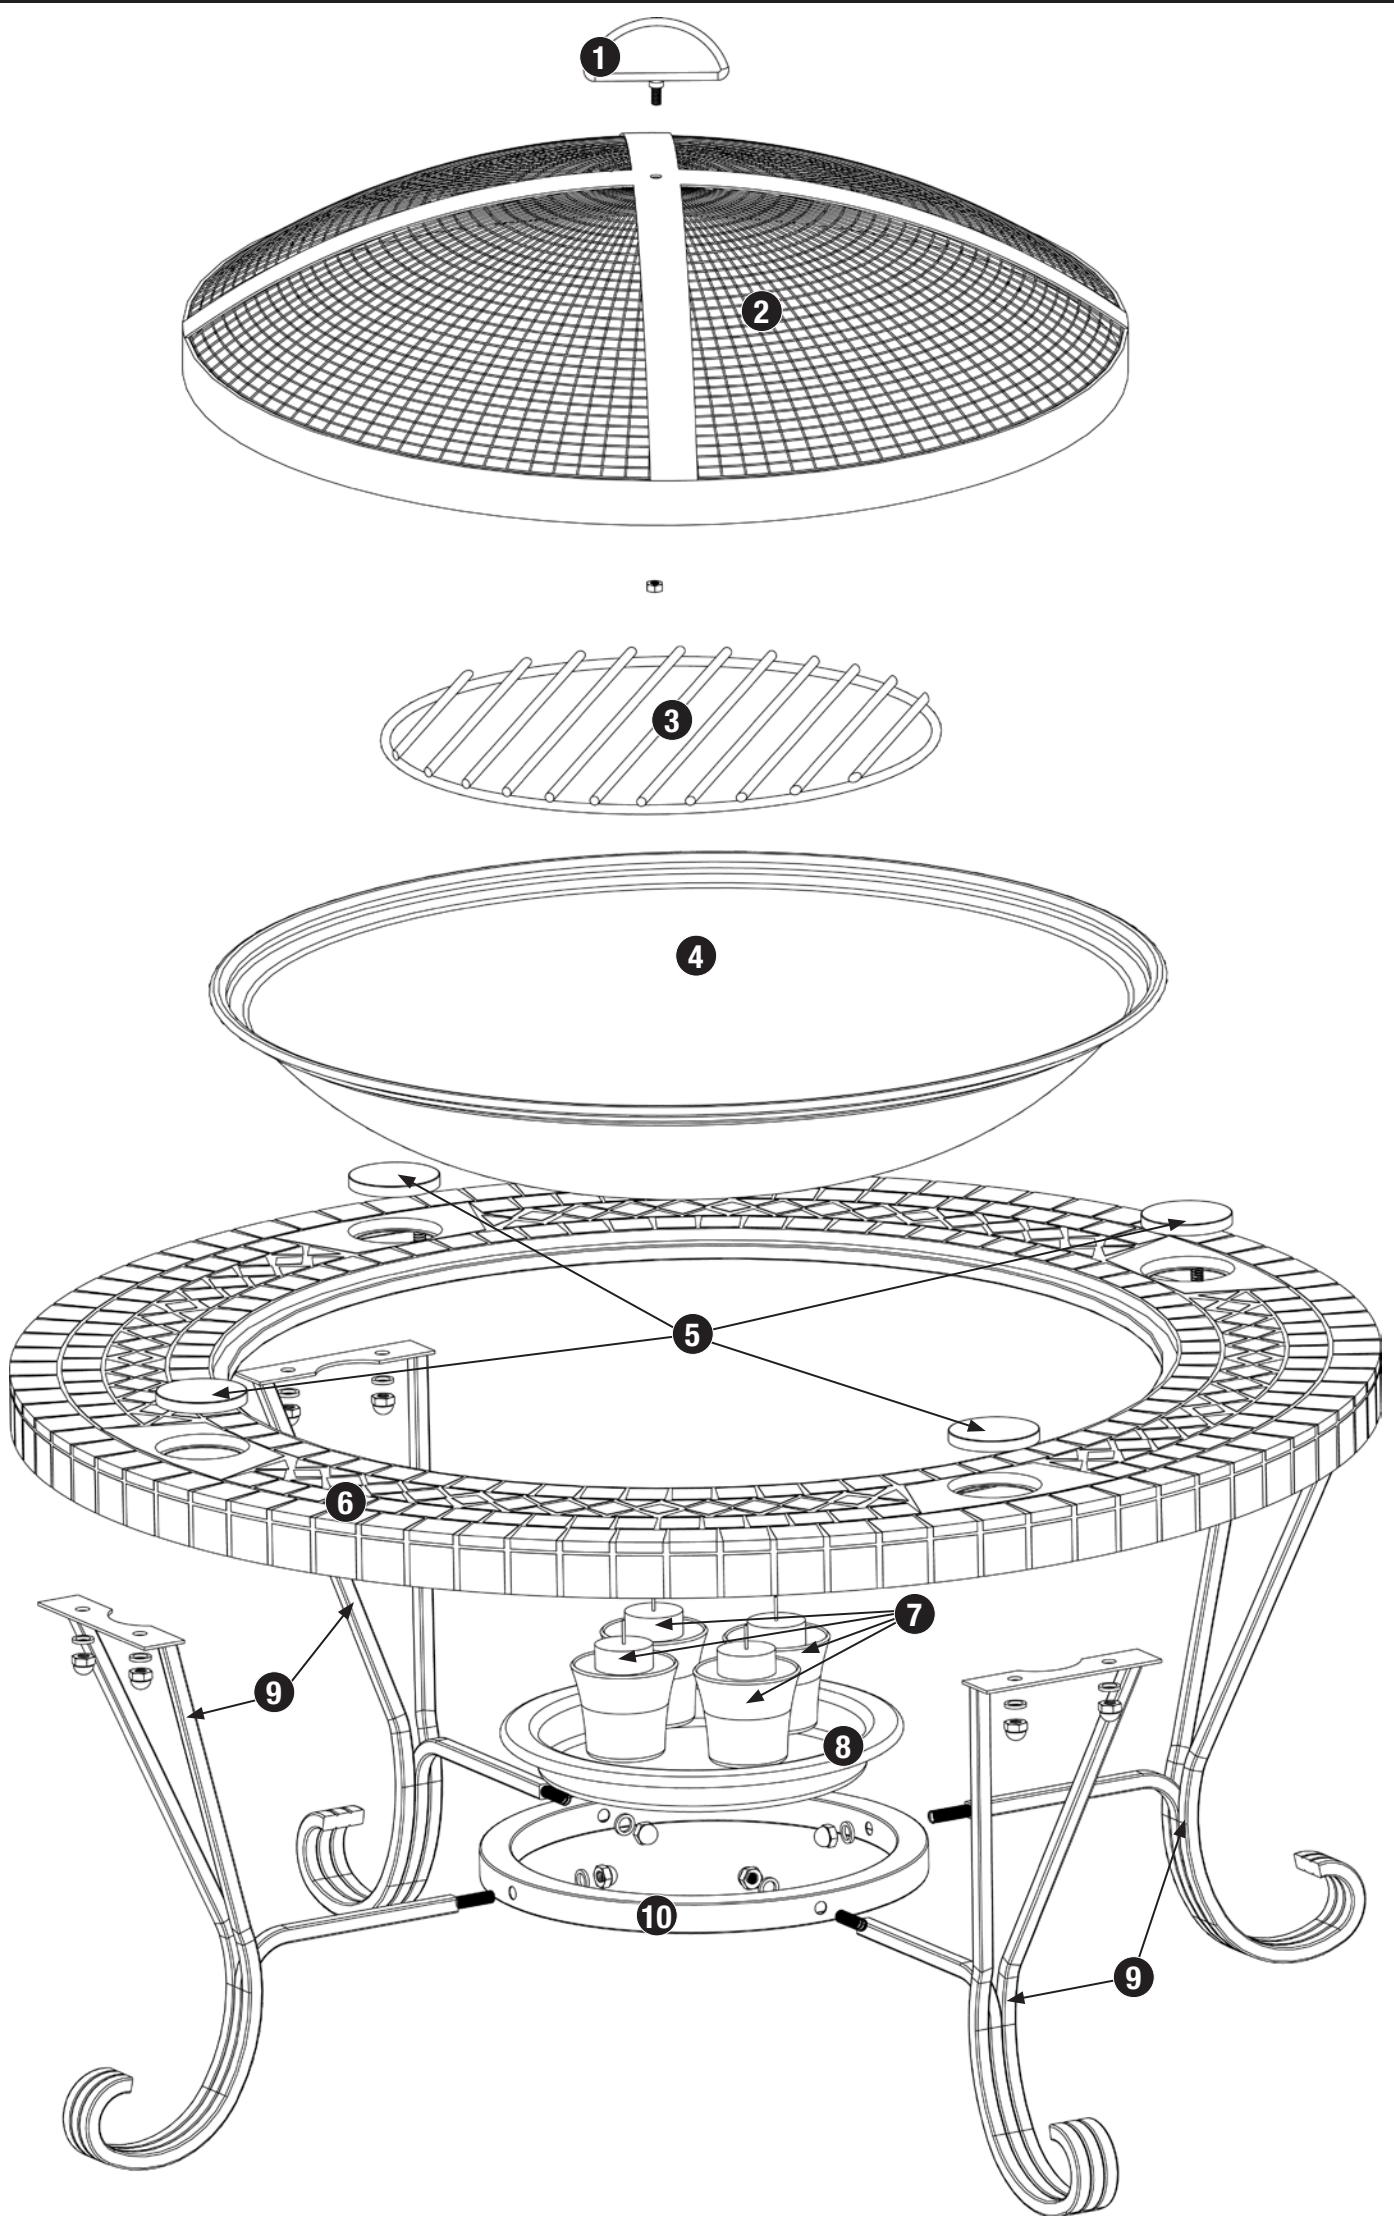

## Hardware

<b>A</b>	Nut	M6 Black Nickel Plated	1 pc
<b>B</b>	Nut	M8 Black Nickel Plated	12 pcs
<b>C</b>	Lock Washer	M8 Black Nickel Plated	12 pcs


**Assembly Instructions****1****DO NOT RETURN PRODUCT TO STORE.**

For assistance call **1.800.762.1142** toll free. Please have your owner's manual and model number available for reference.

For Easiest Assembly:


- To avoid losing any small components or hardware, assemble your product on a hard level surface that does not have cracks or openings.
- Clear an area large enough to layout all components and hardware.
- When applicable, tighten all hardware connections by hand first. Once the step is completed go back and fully tighten all hardware.
- Follow all steps in order to properly assemble your product.

Typical assembly: approximately 30 minutes.

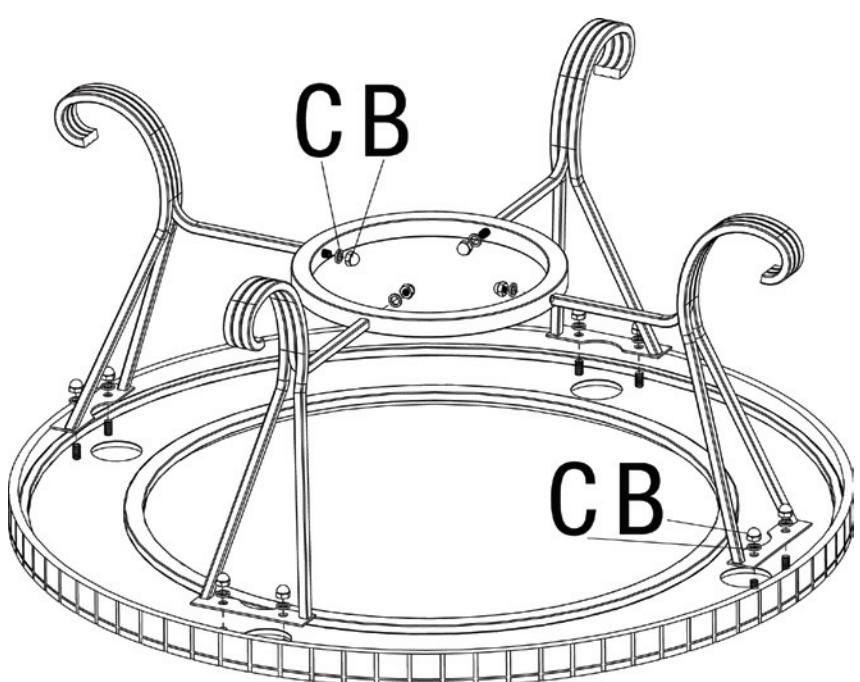
**2****Assemble Base**

**B** x 12

**C** x 12

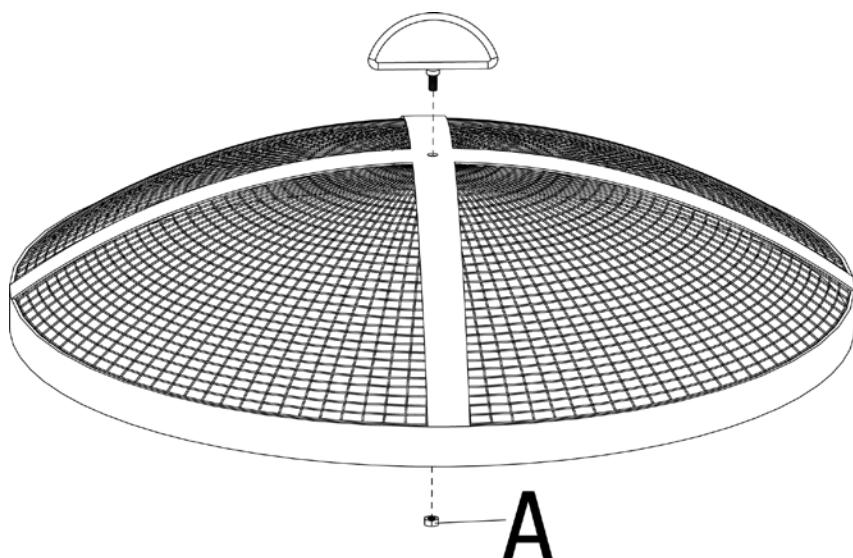**3****Attach Handle**


**A** x 1

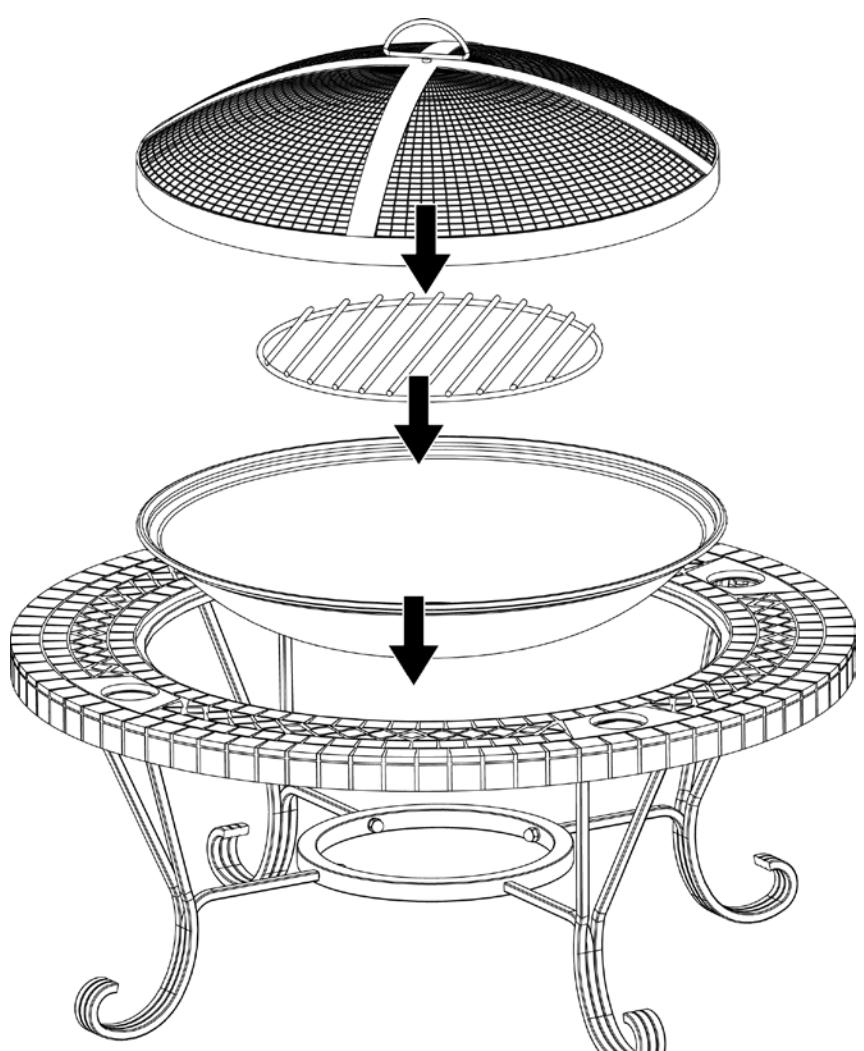**4****Insert Bowl, Wood Grate and Spark Guard**

Contact 1.800.762.1142 for assistance. Do not return to place of purchase.


**5**

Insert Candle Hearth Inserts

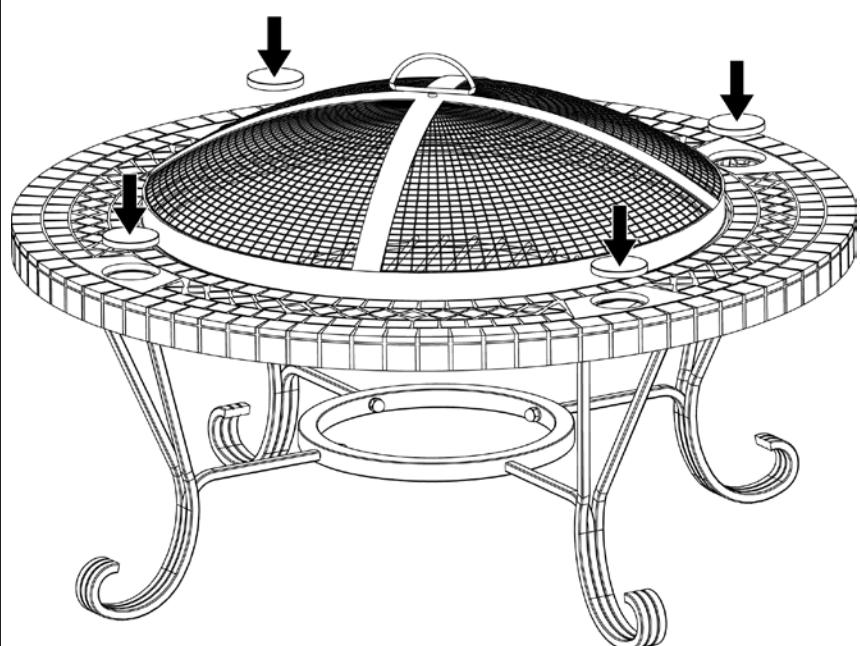


**6**

Insert Candles

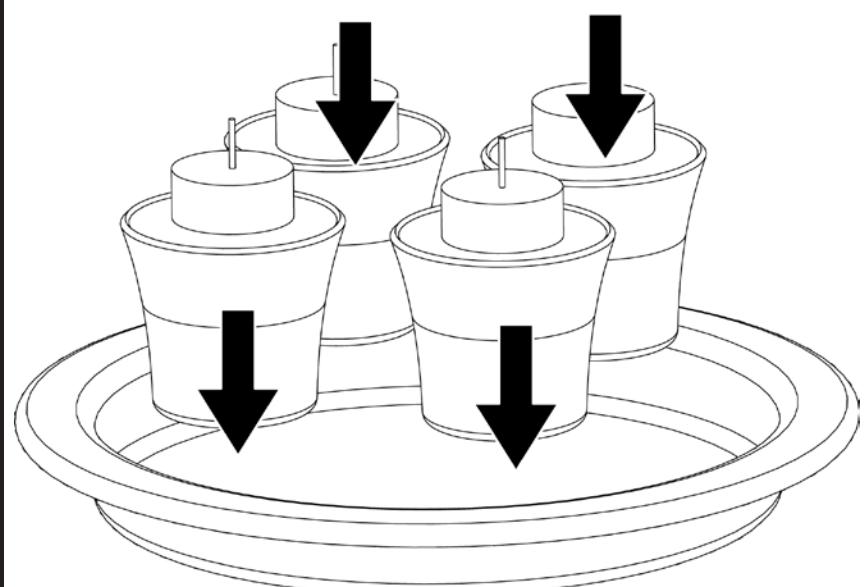


**7**

Place Into Base.  
Remove Wax Candles Before Lighting Wood Fire

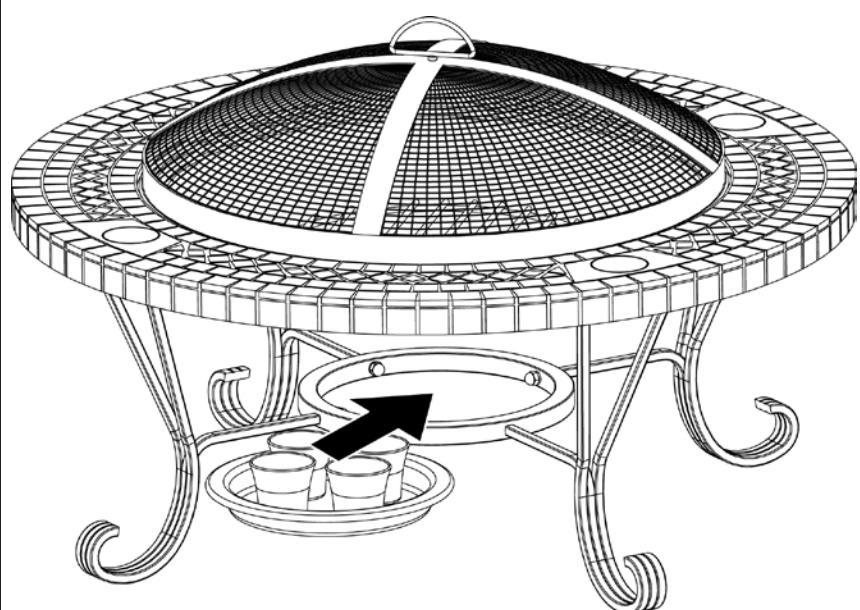

**8**

Remove Wax Candles Before Lighting Wood Fire

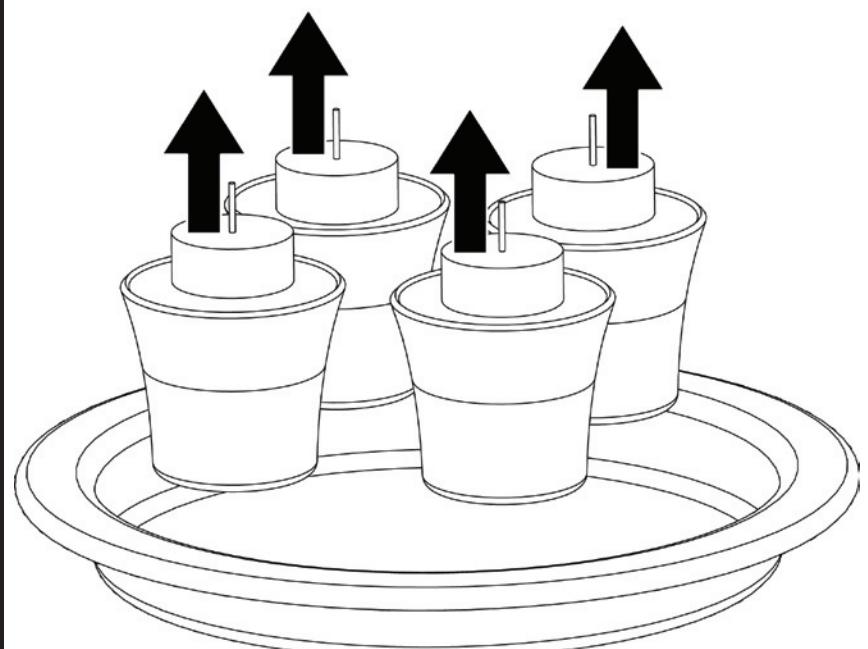

## Operating Instructions

**⚠ WARNING:** Before using this outdoor fireplace, make sure you have read, understand and are following all information provided in the Important Safeguards presented on page 2. Failure to follow those instructions can cause death, serious injury or property damage.

### Lighting with wood

1. Use candle hearth inserts when lighting wood fire. Candles are for ambiance and not to be used in conjunction with wood fire. Remove wax candles from storage under bowl or from hearth mantle before lighting wood fire.
2. Make sure there is only a small amount of ash in the bottom of the bowl.
3. Place a layer of dry kindling or a natural firestarter such as Fatwood™ onto the center of the grate.
4. Place above that a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the diameter of the bowl.
5. Use a match to light kindling or firestarter.
6. Using heat resistant gloves close spark guard door, once the kindling or firestarter is lit.

### Tending the fire

You may need to shift and/or add logs for an ideal experience.

**Do NOT place a hot spark guard or hot fireplace tools onto combustible surfaces such as grass, wooden deck or furniture.**

1. Using heat resistant gloves, carefully open spark guard door.
2. While using a long handled fireplace tool, shift coals and logs to allow additional airflow.
3. Do NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
4. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top of coals. Be careful not to shift ashes.
5. Using heat resistant gloves close spark guard door.

### Using candles

1. Use candle hearth inserts when lighting wood fire. Candles are for ambiance and not to be used in conjunction with wood fire. Remove wax candles from storage under bowl or from hearth mantle before lighting wood fire.

### Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fireplace.

## Cleaning and Care

### Inspecting

This outdoor fireplace should be inspected on a regular basis to ensure product safety and longer product life.

**Do NOT attempt to inspect this outdoor fireplace until the fire is COMPLETELY out.**

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If damage to any component is detected, do NOT operate until repairs are executed.

### Cleaning

This outdoor fireplace should be cleaned on a regular basis to promote safer experiences and longer product life.

*Note:* After repeated use, a slight discoloration of the finish may occur.

**Do NOT attempt to clean this outdoor fireplace until the fire is COMPLETELY out.**

**Do NOT use oven cleaner or abrasive cleaners as they will damage this product.**

**Do NOT clean any part of this outdoor fireplace in a self cleaning oven as it may damage the finish.**

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

### Storage

**Do NOT move or store this outdoor fireplace until the fire is COMPLETELY out.**

1. Once the fire is out, coals are cold and outdoor fireplace is cool to the touch, remove ashes and properly dispose.
2. Store assembled in a cool, dry location away from children and pets.

## Cleaning and Care (continued)

call 1.800.762.1142.

### Limited Warranty

Blue Rhino Global Sourcing, Inc (“Vendor”) warrants to the original retail purchaser of this product, and to no other person, that if this product is assembled and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, all parts in such product shall be free from defects in material and workmanship. Vendor may require reasonable proof of your date of purchase. Therefore, you should retain your sales slip or invoice. This Limited Warranty shall be limited to the repair or replacement of parts, which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor’s Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and if Vendor approves the claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to the original retail purchaser, freight or postage prepaid.

This Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the product as set out in this owner’s manual. In addition, the Limited Warranty does not cover damage to the finish, such as scratches, dents, discoloration, rust or other weather damage, after purchase.

This Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from sellers other than authorized retailers or distributors, including the warranty of merchantability or the warranty of fitness for a particular purpose. VENDOR ALSO DISCLAIMS AND ANY ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. VENDOR SHALL HAVE NO LIABILITY TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor further disclaims any implied or express warranty of, and assumes no responsibility for, defects in workmanship caused by third parties.

This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to everyone.

Vendor does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment, and no such representations are binding on Vendor.

Blue Rhino Global Sourcing, Inc.  
Winston-Salem, North Carolina USA  
(800) 762-1142

## Product Registration

For faster warranty service, please register your product immediately at [www.bluerhino.com](http://www.bluerhino.com) or

reparada.

3. Si encuentra que algún componente está dañado, NO opere la unidad antes de haberla

2. Inspeccione los componentes para detectar señales de daños o oxidación.

1. Examine las manijas para estar seguro de que continúan firmemente instaladas.

No trate de limpiar esta chimenea para exteriores antes de que el fuego se haya

apagado COMPLETAMENTE.

funcionamiento es seguro y prolongar su vida útil.

Esta chimenea para exteriores debe inspeccionarse a intervalos regulares para asegurar que su

limpieza y cuidado

## Limpieza y Cuidado

chimenea para exteriores.

2. NO use agua para extinguir el fuego pues esta práctica es peligrosa y puede dañar su

1. Deje que el fuego se extinga por sí mismo.

Apagado

de las brasas. Cuidadosamente ciérre la puerta del resguardo contra chispas.

Nota: Si necesita agregar leña, useando guantes de protección contra el calor abra la puerta del

c. Useando guantes resistentes al calor, ciérre la puerta del resguardo contra chispas.

b. Useando tenacillas de mango largo.

a. Useando guantes resistentes al calor, cuidadosamenteabra la puerta del resguardo contra

5. Para remover los almidones:

4. Si el alimento requiere ser volteado, repita por el otro lado las instrucciones de "Cocción".

cocer los almidones hasta que estos alcancen la temperatura deseada.

3. Useando guantes resistentes al calor, ciérre la puerta del resguardo contra chispas y deje

de las brasas calientes, useando tenacillas de mango largo.

2. Useando guantes resistentes al calor, coloque los almidones sobre la parilla de cocción arriba

chispas, y si es necesario deslice la parilla de cocción, no más de la mitad hacia fuera.

1. Useando guantes resistentes al calor, cuidadosamenteabra la puerta del resguardo contra

Cocción

chispas.

5. Useando guantes resistentes al calor, cuidadosamente ciérre la puerta del resguardo contra

ceniza.

4. Esprese hasta que el fuego se haya convirtido en brasas antes de agregar más leña. Si se

encender o suministrar un fuego que se extingue.

3. NO vierta gasolina, kerosene, aceite diesel, líquido para encendedores o alcohol para volar a

fuego adicional de aire.

2. Useando un accesorio de chimenea de mango largo, muerva leños y brasas para permitir un

chispas.

1. Useando guantes resistentes al calor, cuidadosamenteabra la puerta del resguardo contra

terrazas de madera o muelas.

NO coloque un resguardo contra chispas o herramientas calientes sobre el césped, sobre

usado necesitar mover los leños a agregar leños para obtener un funcionamiento ideal.

Cuidado del Fuego

que la leña menuda o el material de encendido han quedado prendidos.

5. Use guantes resistentes al calor para cerrar la puerta del resguardo contra chispas una vez

4. Use una cerilla para encender la leña menuda o el material para encender el fuego.

dímetro del cuenco.

3. Coloque encima una capa de leña seca cortada en longitudes no mayores de 3/4 del

como Fatwood™, en el centro de la rejilla.

2. Coloque una capa de leña menuda seca o un material natural para encender el fuego, tal

cuenco.

1. Verifique que únicamente ha quedado una pedregaña cantidad de ceniza en el fondo del

Encendido

dahos a la propiedad, serias lesiones y aun la muerte.

instrucciones completamente pues la falla en segurillas puede causar

precauciones que se presentan en la página 2. Siga estas

asegúrese de haber leído y entienda completamente las importantes

ADVERTENCIA: Antes de usar esta chimenea para exteriores,

Instrucciones de operación

Chimenea para exteriores, modelo n° WAD9131T

## Limpieza

Está chimenea para exteriores debe limpiarse a intervalos regulares para asegurar su

funcionamiento seguro y prolongar su vida útil.

Nota: Despues de repetido uso, la superficie de metal puede descolorarse un poco.

1. Limpie las superficies donde el detergente o la soda no son suficientes para la limpieza, use un

de hogar.

2. En superficies donde el detergente o la soda no son suficientes para la limpieza, use un

deseñgrasante a base de cloricos y un cepillo de nylon para fregar.

3. Encule con agua limpia.

4. Remueva la acumulación de creosota de la tapa y los costados del resguardo de ceniza con

un producto de limpieza para chimeneas.

5. Use guantes resistentes al calor para encender la leña menuda o el material para encender el fuego.

que la leña menuda o el material de encendido han quedado prendidos.

4. Use una cerilla para encender la leña menuda o el material para encender el fuego.

dímetro del cuenco.

3. Coloque encima una capa de leña seca cortada en longitudes no mayores de 3/4 del

como Fatwood™, en el centro de la rejilla.

2. Coloque una capa de leña menuda seca o un material natural para encender el fuego, tal

cuenco.

1. Verifique que únicamente ha quedado una pedregaña cantidad de ceniza en el fondo del

Encendido

Notas de limpiar esta chimenea para exteriores antes de que el fuego se haya

automático de limpiar ningún componente de esta chimenea para exteriores en un horario

NO trate de limpiar ningún componente de esta chimenea para exteriores antes de que el fuego se haya

unidad.

NO use productos para limpiar de hornos o limpiadores abrasivos pues estos dañan la

extinguidora COMPLETAMENTE.

NO trate de limpiar esta chimenea para exteriores antes de que el fuego se haya

notas de limpiar este producto de repetido uso, la superficie de metal puede descolorarse un poco.

funcionamiento seguro y prolongar su vida útil.

esta chimenea para exteriores debe limpiarla a intervalos regulares para asegurar su

funcionamiento seguro y prolongar su vida útil.

Nota: Despues de repetido uso, la superficie de metal puede descolorarse un poco.

1. Una vez que el fuego se haya apagado, las brasas están frías y la unidad se sienta

suficientemente fría al tacto, remueva la ceniza y descartela de manera apropiada.

2. Una vez que el fuego se haya apagado, las brasas están frías y la unidad se sienta

suavemente fría al tacto, remueva la ceniza y descartela de manera apropiada.

3. Encule con agua limpia.

4. Remueve la acumulación de creosota de la tapa y los costados del resguardo de ceniza con

un producto de limpieza para chimeneas.

5. Use guantes resistentes al calor para encender la leña menuda o el material para encender el fuego.

que la leña menuda o el material de encendido han quedado prendidos.

4. Use una cerilla para encender la leña menuda o el material para encender el fuego.

dímetro del cuenco.

3. Coloque encima una capa de leña seca cortada en longitudes no mayores de 3/4 del

como Fatwood™, en el centro de la rejilla.

2. Coloque una capa de leña menuda seca o un material natural para encender el fuego, tal

cuenco.

1. Verifique que únicamente ha quedado una pedregaña cantidad de ceniza en el fondo del

Encendido

Notas de limpiar esta chimenea para exteriores antes de que el fuego se haya

extinguidora COMPLETAMENTE.

NO trate de limpiar esta chimenea para exteriores antes de que el fuego se haya

notas de limpiar este producto de repetido uso, la superficie de metal puede descolorarse un poco.

funcionamiento seguro y prolongar su vida útil.

esta chimenea para exteriores debe limpiarla a intervalos regulares para asegurar su

funcionamiento seguro y prolongar su vida útil.

Nota: Despues de repetido uso, la superficie de metal puede descolorarse un poco.

1. Una vez que el fuego se haya apagado, las brasas están frías y la unidad se sienta

suficientemente fría al tacto, remueva la ceniza y descartela de manera apropiada.

2. Una vez que el fuego se haya apagado, las brasas están frías y la unidad se sienta

suavemente fría al tacto, remueva la ceniza y descartela de manera apropiada.

3. Encule con agua limpia.

4. Remueve la acumulación de creosota de la tapa y los costados del resguardo de ceniza con

un producto de limpieza para chimeneas.

5. Use guantes resistentes al calor para encender la leña menuda o el material para encender el fuego.

que la leña menuda o el material de encendido han quedado prendidos.

4. Use una cerilla para encender la leña menuda o el material para encender el fuego.

dímetro del cuenco.

3. Coloque encima una capa de leña seca cortada en longitudes no mayores de 3/4 del

como Fatwood™, en el centro de la rejilla.

2. Coloque una capa de leña menuda seca o un material natural para encender el fuego, tal

cuenco.

1. Verifique que únicamente ha quedado una pedregaña cantidad de ceniza en el fondo del

Encendido

Notas de limpiar esta chimenea para exteriores antes de que el fuego se haya

extinguidora COMPLETAMENTE.

NO trate de limpiar esta chimenea para exteriores antes de que el fuego se haya

notas de limpiar este producto de repetido uso, la superficie de metal puede descolorarse un poco.

funcionamiento seguro y prolongar su vida útil.

esta chimenea para exteriores debe limpiarla a intervalos regulares para asegurar su

funcionamiento seguro y prolongar su vida útil.

Nota: Despues de repetido uso, la superficie de metal puede descolorarse un poco.

1. Una vez que el fuego se haya apagado, las brasas están frías y la unidad se sienta

suficientemente fría al tacto, remueva la ceniza y descartela de manera apropiada.

2. Una vez que el fuego se haya apagado, las brasas están frías y la unidad se sienta

suavemente fría al tacto, remueva la ceniza y descartela de manera apropiada.


3. Encule con agua limpia.

4. Remueve la acumulación de creosota de la tapa y los costados del resguardo de ceniza con

un producto de limpieza para chimeneas.


5. Use guantes resistentes al calor para encender la leña menuda o el material para encender el fuego.

que la leña menuda o el material de encendido han quedado prendidos.

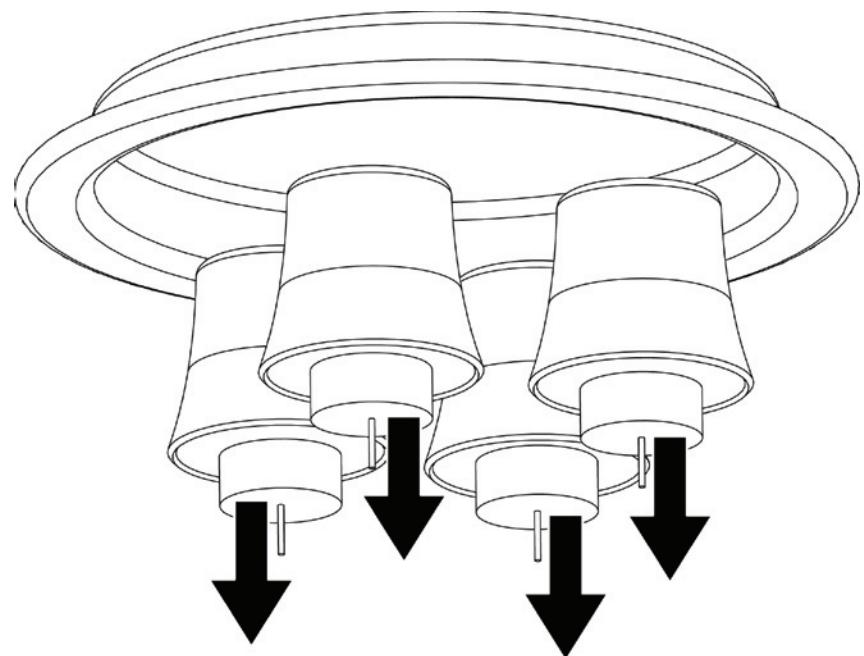


Remove Wax Candles Before Lighting Wood Fire

8

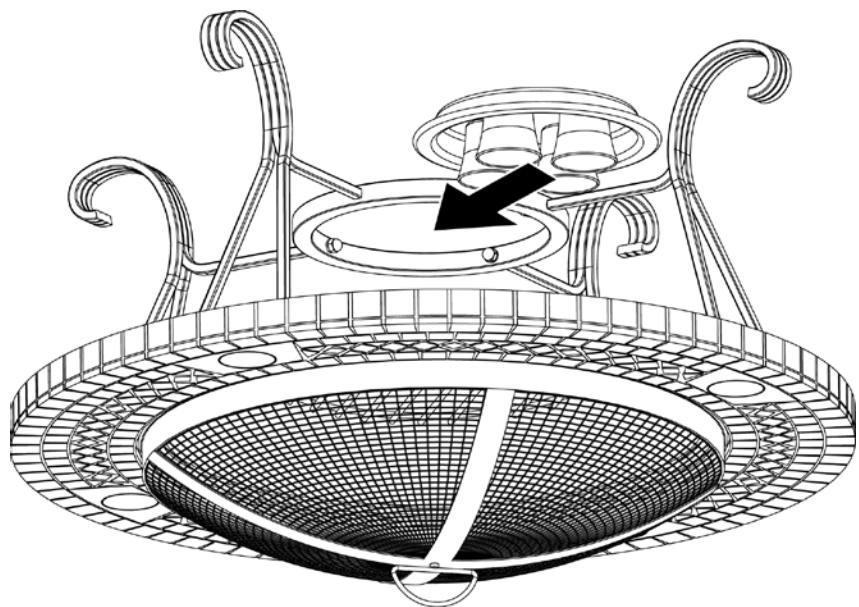


Remove Wax Candles Before Lighting Wood Fire  
Coloque dentro de las bases.

7

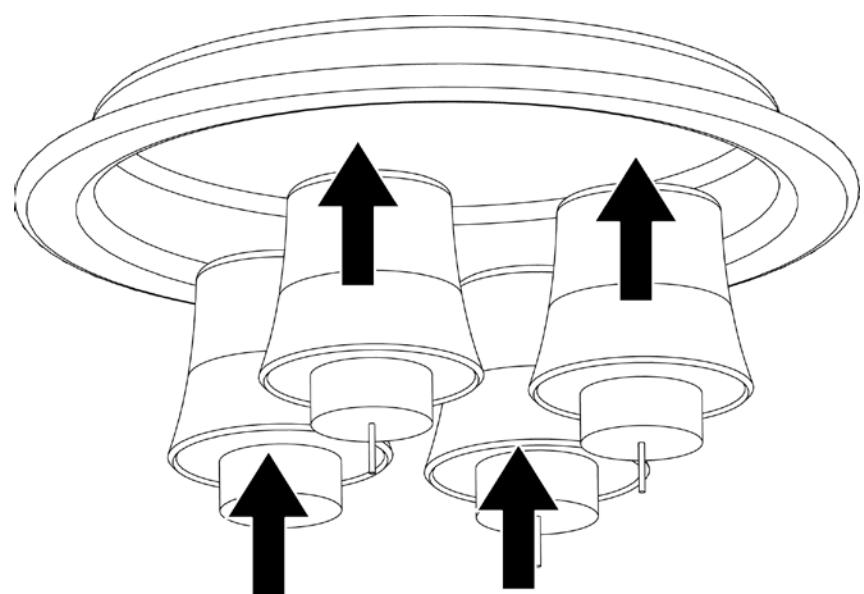

Coloque las velas


6

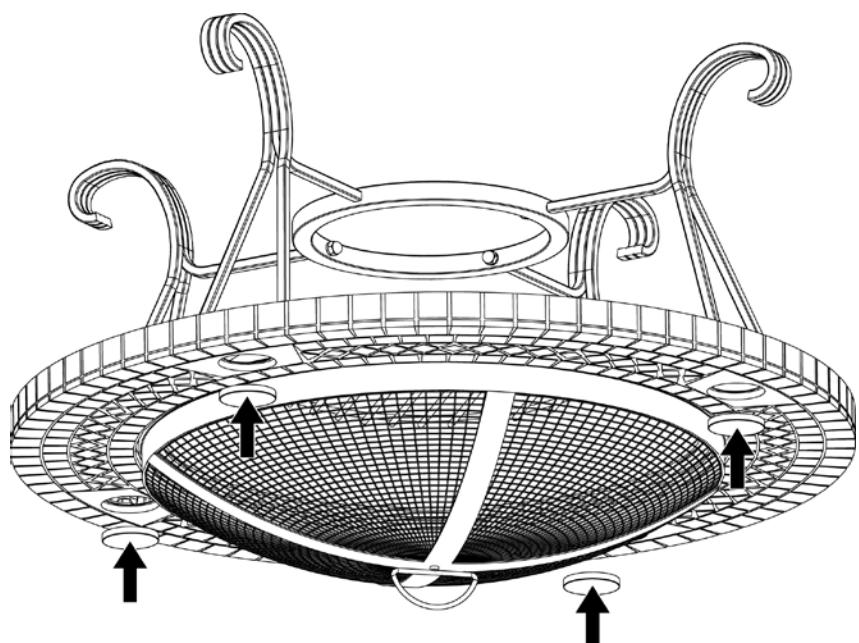

Encage los inserdos de cristal para velas


5

A  
x 1

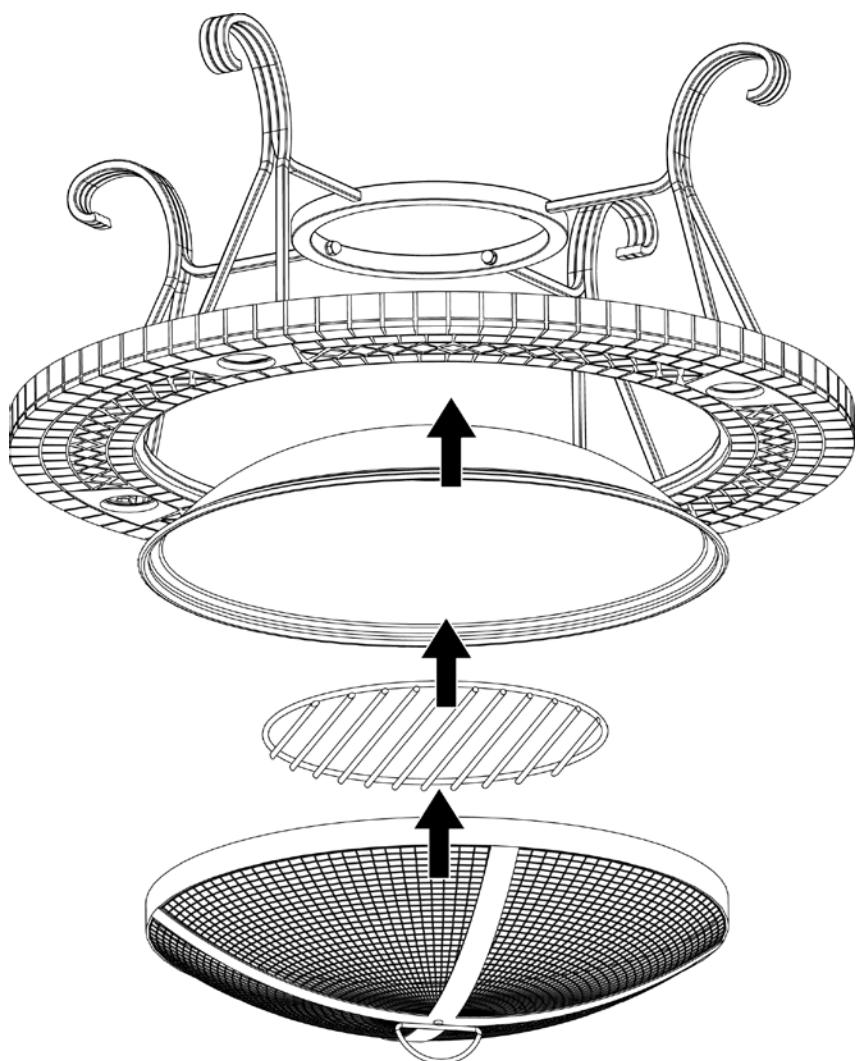

Inserre el cuenco, la rejilla para leña y el resguardo  
contra chispas

4

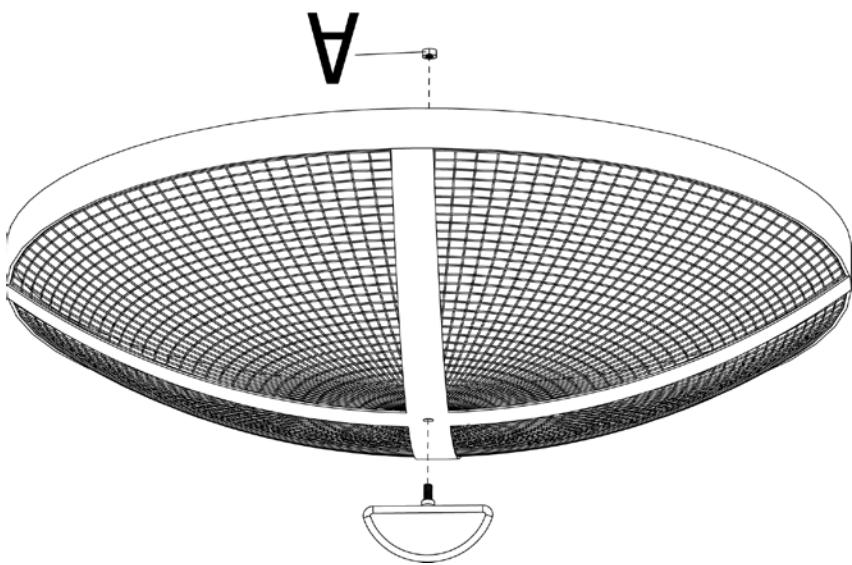


File la manija

3

B  
x 12

C  
x 12

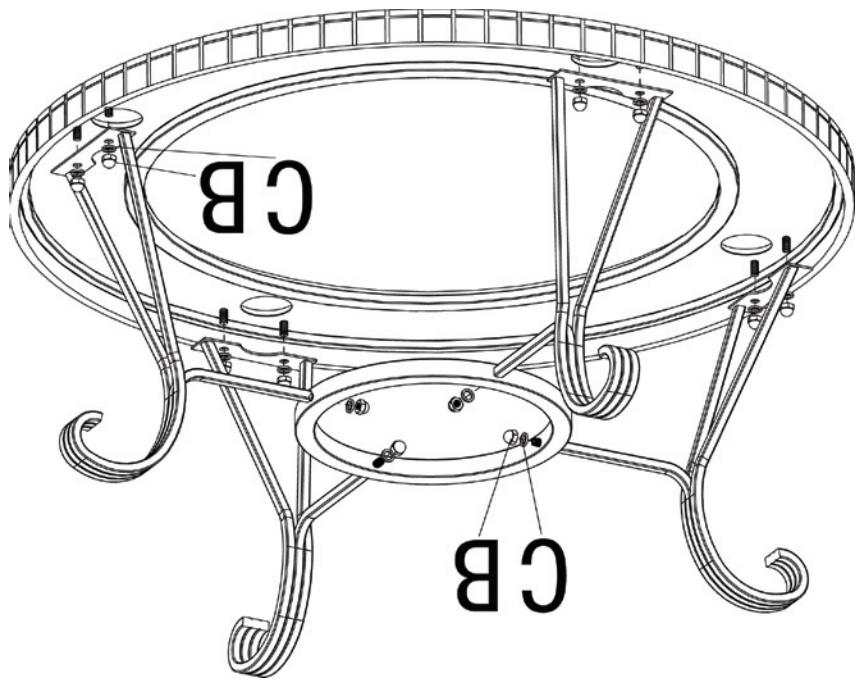

Ensamble la base

2

Tiempo de armado estimado: 30 minutos.

- Si siga todos los pasos en el orden indicado para armar apretete completamente todos los elementos de ferretería, conexiones de ferretería. Una vez que ha terminado el paso, compónete sea del caso, apriete a mano, en un principio, las componentes y los elementos de ferretería.
- Despegue un área suficientemente grande para disponer todos los desperdicios ni henijas.
- Evite la pérdida de componentes pedulejos o elementos de ferretería, armando el producto en un lugar de piso plano sin aberturas ni huecos.

Para facilitar el armado:

Si necesita ayuda llame, sin cargo, al 1.800.762.1142. Por favor tenga a mano su manual y el número del modelo, para referencia.

referencia.

favor tener a mano su manual y el número del modelo, para

referencia.

referencia.</p

## Ferretería

A	Tuerca	Niquelada, negra, M6	1 pz
B	Tuerca	Niquelada, negra, M8	12 pz
C	Arandela de cierre	Niquelada, negra, M8	12 pz

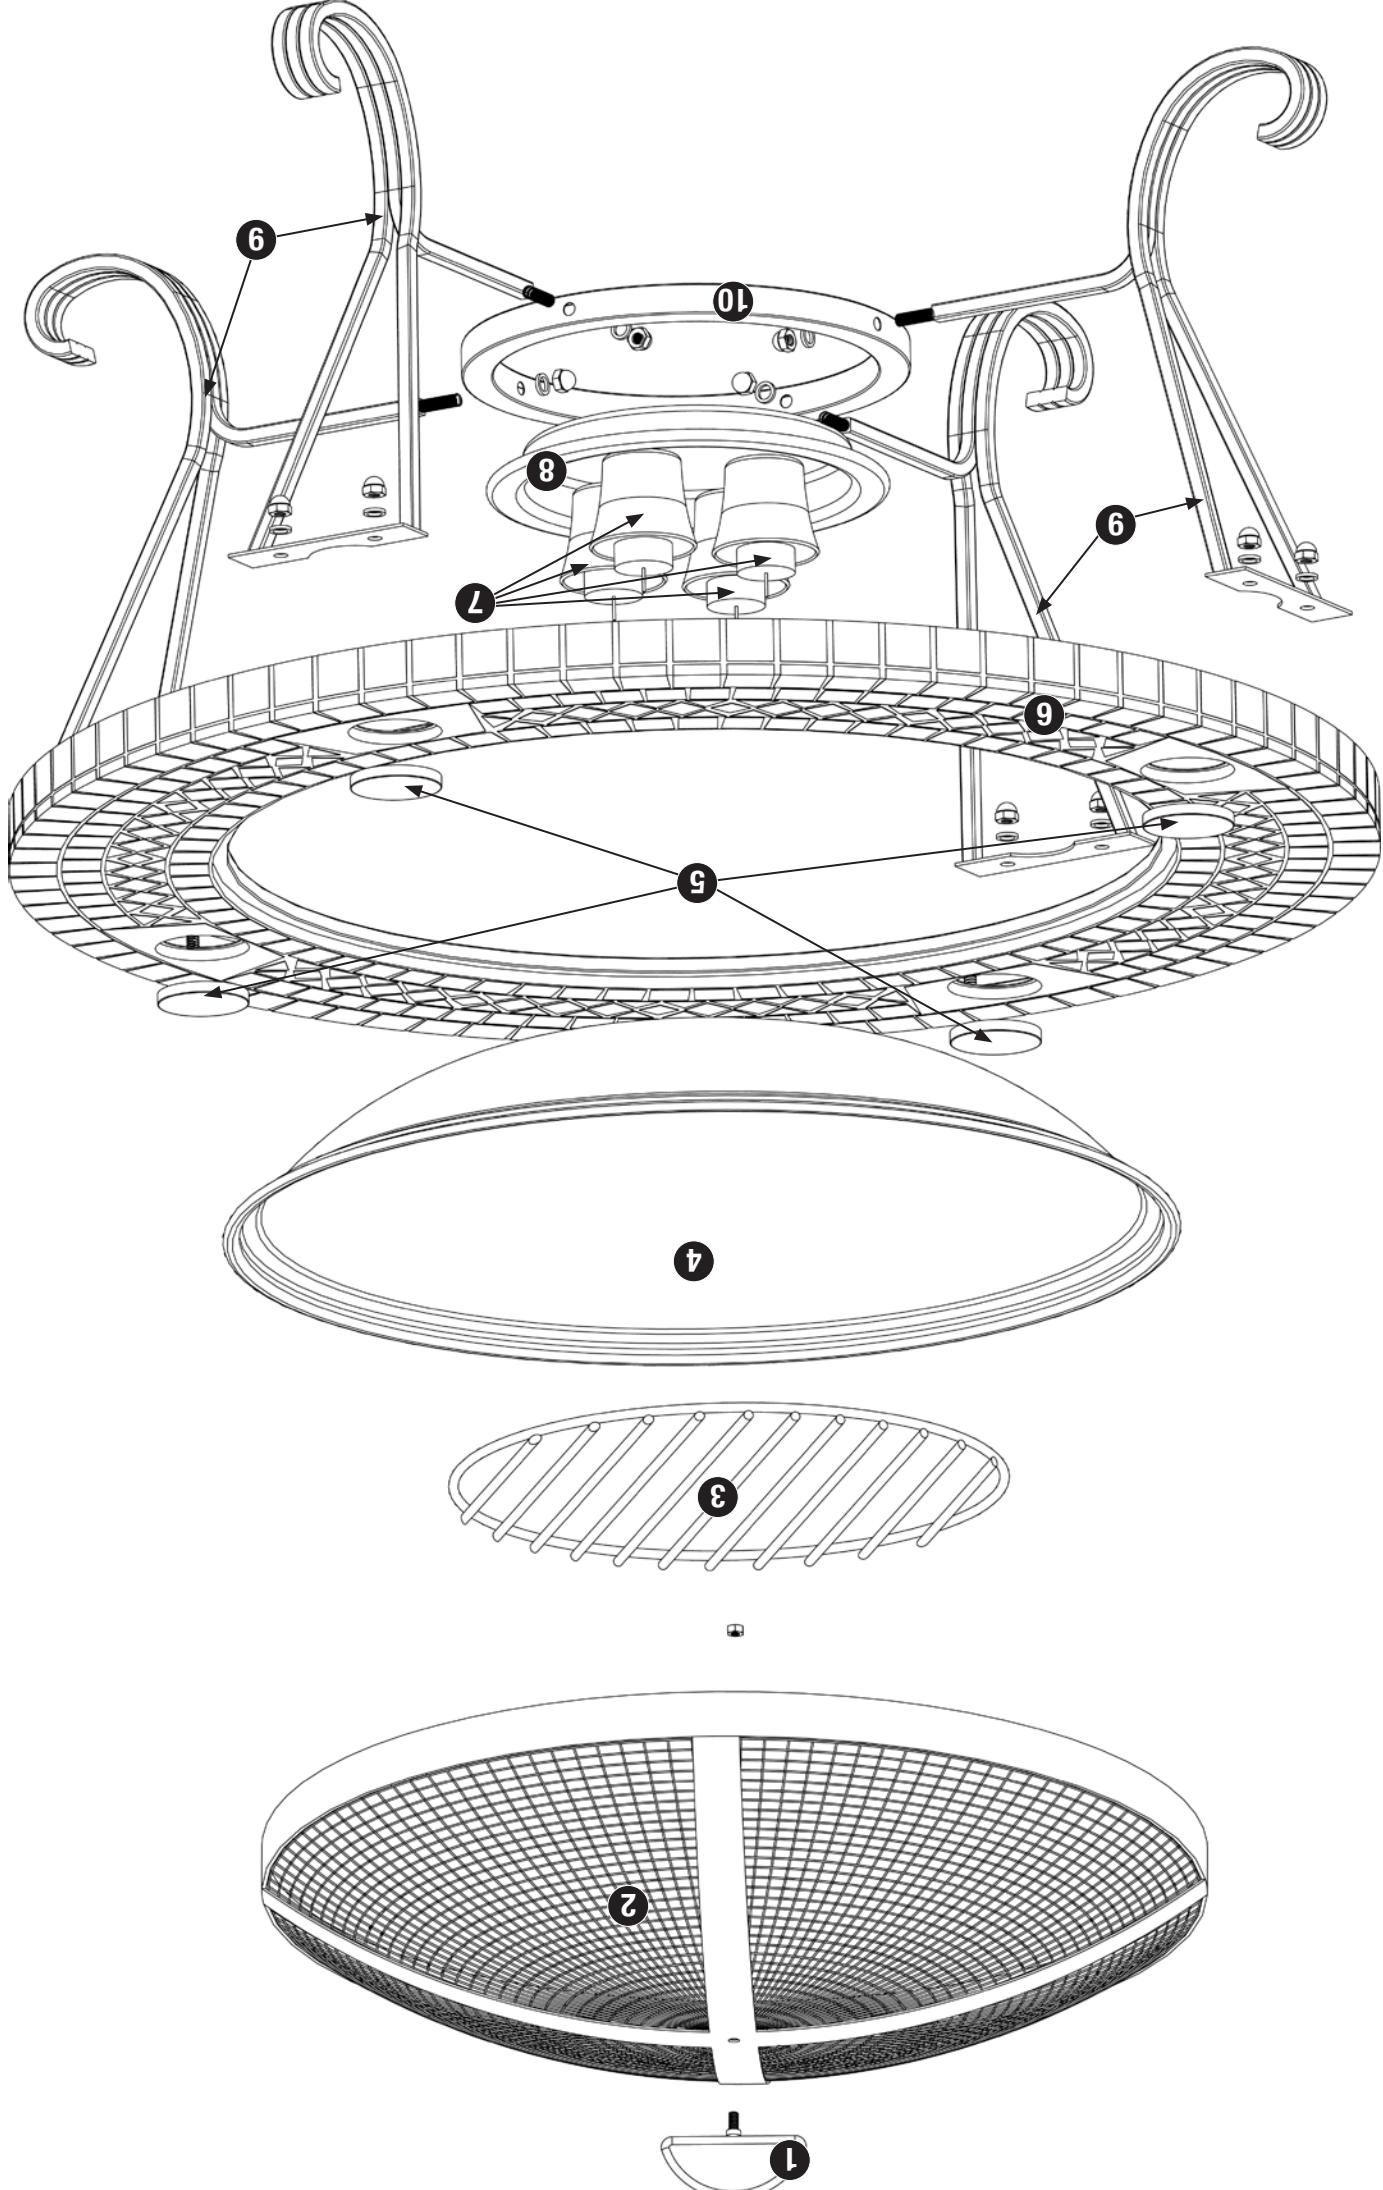


Diagrama de explosión

Lista de piezas

\* Remove wax candles before lighting wood fire.

10	Soporte de la base
9	Pata (4)
8	Cuenco inferior
7	Vaso para vela (4) *
6	Hogar
5	Inserto de crisol para vela (4)
4	Cuenco
3	Rejilla para leña
2	Resguardo contra chispas
1	Manija



9	Garantía limitada .....
9	Registro del producto .....
9	Almacenamiento .....
9	Limpieza .....
9	Inspección .....
9	Limpieza y cuidado .....
9	Apagado de la chimenea para exteriores .....
9	Cocción .....
9	Cuidado del fuego .....
9	Encendido .....
6	Instrucciones de operación .....
4	Instrucciones de armado .....
3	Díagrama de explosión y elementos de ferretería .....
2	Salvaguardias importantes .....

**Índice**

# Chimenea para exteriores

## Modelo n° WAD9131T

# MANUAL DEL USUARIO

Para otra persona, entreguéle este manual para futuras consultas. Consérve estas instrucciones para futuras consultas. Si está montando esta unidad

- Una instalación, ajuste, alteración, reparación o mantenimiento inadecuados pueden causar lesiones o daños a la propiedad.
- Lea atentamente las instrucciones de instalación, funcionamiento y mantenimiento del equipo antes de instalarlo, ponerlo en marcha o darle servicio.
- El no seguir estas instrucciones puede ocasionar un incendio o una explosión, con sus consecuentes daños a la propiedad, lesiones personales y hasta accidentes fatales.

**PARA SU SEGURIDAD:**

**PARA SU SEGURIDAD:**
